



## Motor & Handle

## Models F2003, F2003-001, F2003-101

Ref. No.	Part No.	Description
1	17001FW	* Screw
2	42197002	Motor Cap Assem.
3	49351	+ Motor Brush
4	49423	+ Motor Brush Spring
5	49397	+* Retainer
6	49435	+* Pin
7	160356	* Terminal
8	48969	* Wire Nut
9	49379	+ Lead Wire Collar
10	14197	+* Terminal
11	23444	Field Assem.
12	21312720	* Washer
13	15865	* Washer
14	49344	+* Insulator
15	23445	Armature
16	49417AZ	+* Screw
17	12165	Gear Cover Assem.
18	168403	Brush Shaft & Insert - L.H.
19	35674	Idler Gear - L.H.
20	35675BZ	Idler Gear - R.H.
21	168402	Brush Shaft & Insert - R.H.
22	14378	+* Screw
23	12910	Cord Clamp
24	14367	+ Cord Insulator
25	49388AY	+ Bail Shaft - R.H.
26	21312724	* Washer
27	21312756	* Washer
28	35584	+ Shaft & Nut - L.H.
29	35583	Shaft & Nut - R.H.
30	52373001	+ Data Plate
31	49508	+* Screw
32	42273011	Gear Housing Comp.
34	17074AG	+ Hood Adapter
37	12891	Handle Control Lever Spring
38	34207AG	Foot Pad
39	12574	+ Lead Wire by Foot
40	49429	+* Screw
41	165104	Bail Mount Bracket w/Switch
	43138001	+ Bail Mount Bracket Only
42	21388105	+* Nut - Special
43	21312761	* Washer
44	14377	+* Switch Insulator
45	14360	+* Eyelet
46	19512AH	Switch
47	12892	* Screw - Machine
48	13190	+* Lead Wire Holder
49	45517	* Wire Holder
50	46363338	Attach. Cord
	12887HH	+ Attach. Cord - F2003-001
51	35380	Service Plug Assem.
52	14504	+ Bail Socket Insulator
53	38541002	Brush Gear

## Handle & Hood

Ref. No.	Part No.	Description
1	49137LL	+ Handle - Upper Half
	35568JM	+ Handle Assem. - Upper Half - F2003-001, F2003-101
2	48294AW	Handle Bolt & Nut
3	12910	Cord Clamp
4	35007LL	+ Handle - Lower Half
	35007JM	Handle - Lower Half - F2003-001, F2003-101
5	41415002	Bail Assem. Comp.
8	167015DL	+ Hood Comp.
	167015EY	+ Hood Comp. - F2003-001
	167015JX	+ Hood Comp. - F2003-101
11	17874JM	Furniture Guard
12	16728	+* Screw

### ITEMS NOT ILLUSTRATED

168505	+ Brush Shaft Bushing
12622	* Plastic Washer used w/Bushing 168505